

Vty -Virtual Terminal πχ όταν συνδεόμαστε με telnet ή terminal.



Cisco Καλώδιο RS232 25-pin male σε
RJ45 female 1.8m (72-3663-01)

Router>**enable**

Router#**conf**

Router#**configure term**

Router#**configure terminal**

Enter configuration commands, one per line. End with CNTL/Z.

Router(config)#

Router(config)#**interface FastEthernet0/0**

Router(config-if)#**ip address 192.168.0.1 255.255.255.0**

Router(config-if)#**ip address 192.168.0.1 255.255.255.0**

Router(config-if)#**no shutdown**

Router(config-if)#

Router(config)#**line ?**

<2-499> First Line number

aux Auxiliary line

console Primary terminal line

tty Terminal controller

vty Virtual terminal

x/y/z Slot/Subslot/Port for Modems

Router(config)#**line con 0**

Router(config-line)#**password conscisco**

Router(config-line)#**login**

Router(config)#**line aux 0**

Router(config-line)#**password auxcisco**

Router(config-line)#**login**

TΩΠΑ ΣΤΑ VIRTUAL TERMINALS

Router(config)#**line vty 0 15**

Router(config-line)#**password vtycisco**

Router(config-line)#**login**

Router(config-line)#**exit**

Router(config)#**enable password cisco**

Router#show run

Building configuration...

.

.

.

line con 0

password conscisco

```
login
!
line aux 0
password auxcisco
login
!
line vty 0 4
password vtycisco
login
line vty 5 15
password vtycisco
login
.
```

```
Router(config)#hostname R-ISP
R-ISP(config)#exit
R-ISP#
%SYS-5-CONFIG_I: Configured from console by console
```

```
R-ISP#
R-ISP# copy running-config startup-config
Destination filename [startup-config]? -*-* ΠΑΤΗΣΔΑ ENTER *-
Building configuration...
[OK]
R-ISP#RELOAD
Proceed with reload? [confirm]
System Bootstrap, Version 12.3(8r)T8, RELEASE SOFTWARE (fc1)
Initializing memory for ECC
.
```

```
R-ISP(config)#servi
R-ISP(config)#service pass
R-ISP(config)#service password-encryption
R-ISP#show run
Building configuration...
```

```
Current configuration : 756 bytes
.
```

```
.
.
.
line con 0
password 7 082243401A1A0C041104
login
!
line aux 0
password 7 082059560A1016141D
login
!
line vty 0 4
password 7 083758570A1016141D
login
line vty 5 15
```

password 7 083758570A1016141D

login

!

!

!

end